



## Default IP, Username and Password

- Default IP address: 192.168.1.13 or192.168.0.13 (vary with firmware version)
- Default username: admin
- Default password: 123456

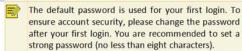

### Appearance

#### Dimensions

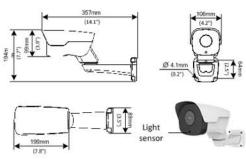

# Mount Your Camera

#### **Installation Steps**

You are recommended to adopt wall mount. Please purchase hardware accessories separately.



- The following installation process is for concealed installation, during which holes are punched on the wall and cables are penetrated into the wall. If open installation is adopted, cables are not penetrated into the wall but threaded out from the outlet on one side of the base.
- Please choose the mounting bracket provided by us if pole mount is adopted.
- 1. Locate the holes, drill holes on the wall, and then mount the plastic anchors of self-tapping screws.
- Paste the drill template and lead the cables through the hole. Use a Ø6mm-6.5mm drill bit to drill 40 mm-depth guide holes according to the template.




# Knock the plastic anchors into the guide holes and ensure that they are tightened up.

2. Mount the camera onto the wal and connect all cables.



Lead the self-tapping screws through the guide holes in the base and fix them on the wall by using a screwdriver.

#### **Cable Connection**

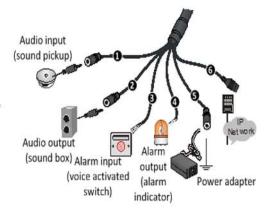

#### AccessYour Camera

Before you begin, check that:

- Your camera is operating properly and connected to the network
- The PC you are using is installed with Internet Explorer 7.0 or later.

Follow these steps to access your camera through the Web interface:

- Open your <u>browser</u>, input the IP address of your camera in the address bar and then press Enter to open thelogin page.
- 2. Enter the username and password and then click Login.

# **Packing List**

- Bullet w/ Pigtail for IP and secondary 12V DC power input
- Extra waterproof connector
- Adhesive template
- Hardware Baggy 4 screws and drywall anchors
- Quick Guide
- Coax Seal

#### Waterproof Components for an RJ45 Plug



Attach the seal ring to the Ethernet interface. Mount the waterproof components in order.Then insert the cable into the Ethernet interface and screw the waterproof bolt in.

#### Waterproof Tail Cable

Connect the tail cables and then take the following steps to protect the tail cables from water using waterproof tapes. The figures are for your reference only.



 Connect the tail cables, and protect the cables and cable connections using insulating tapes. Then wrap all the tail cables together using insulating tapes.



Choose a start point for waterproof tapes and protect the tail cables using waterproof tapes.



You can crimp the inner wires of the cable with the RJ45 plug first and then cover the waterproof components. You may also cover the waterproof components first.

# Coax Seal Recommended

Part # - EC-IRB2-2x 3 year warranty



866-264-0041 sales@envirocams.com

201 N. Elm St. Kemp, TX 75143

Not Your Father's IP Cameras